




WWW.WORLDWORKSGAMES.COM

**CASTLEWORKS  
ULTIMATE™**



## COMPLEX CRENELATIONS

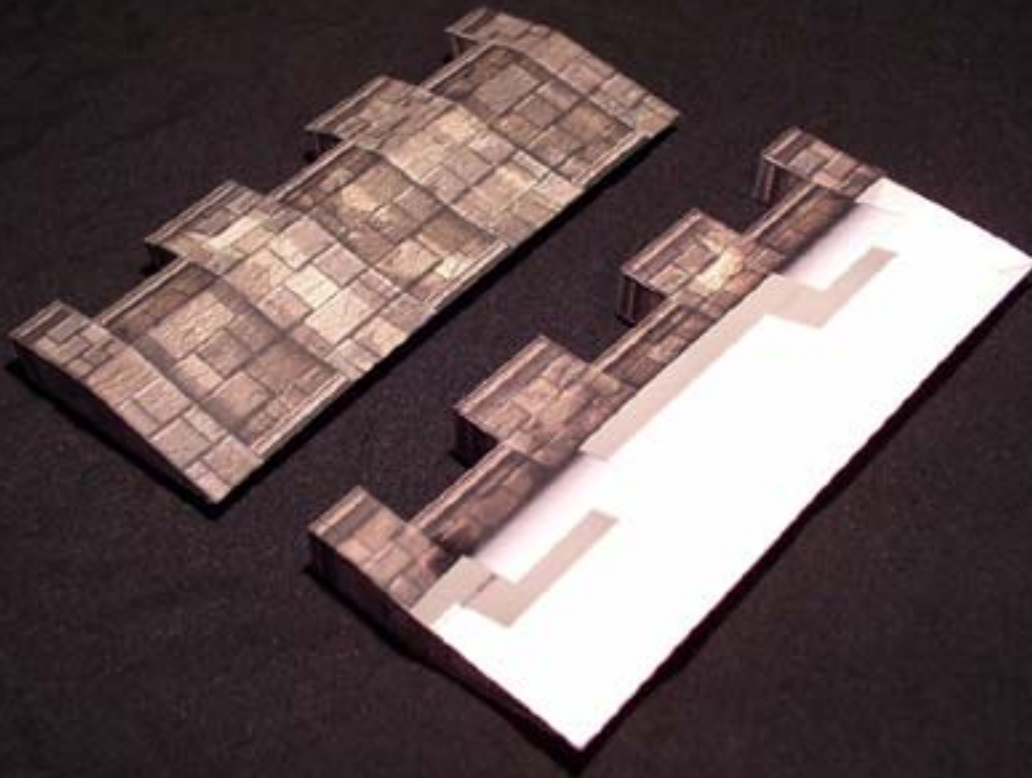

COMPLEX  
CRENELATIONS



For those of you who just can't stand the thought of building 2-dimensional crenelations this model pushes things a bit farther. These sections really don't take much longer to build than the simple version and the end look can't be beat.



Cut, score and fold your model as shown.

Apply a bead of glue to the first inside tab as shown and apply pressure until dry.



Gently squeeze the model from both sides to insure a secure bond.





Continue to the next tab as shown.

Again, apply pressure to the tab until dry. Repeat the above steps on the final inside tab.





Apply a bead of glue to the side tab as shown.



Insert the tab and apply pressure. In this case I'm using a small screwdriver to secure the tab. A pencil or pen will work in a pinch.

Pull out the lower angled tab and apply a bead of glue as shown. Flip the model on its back and apply pressure until dry.

Repeat the above steps on the opposite side of the crenelation.

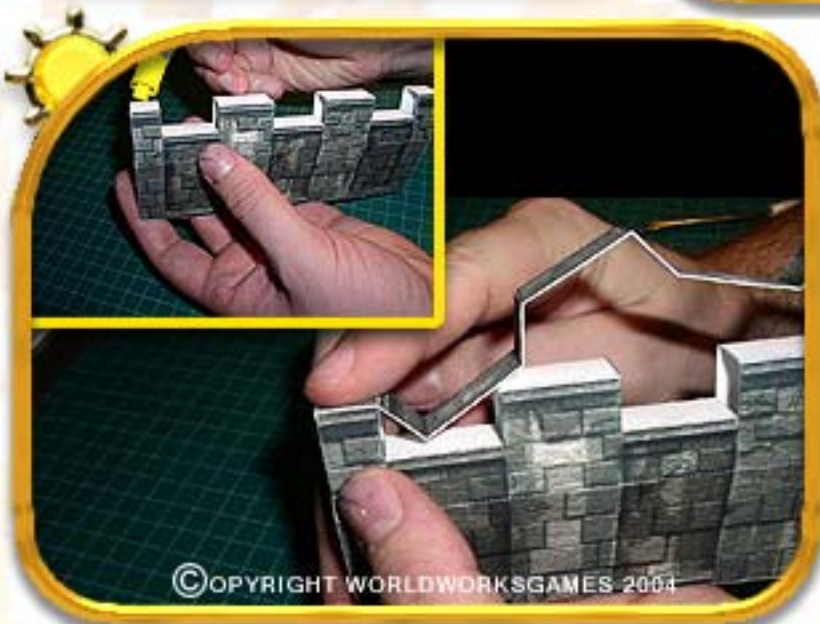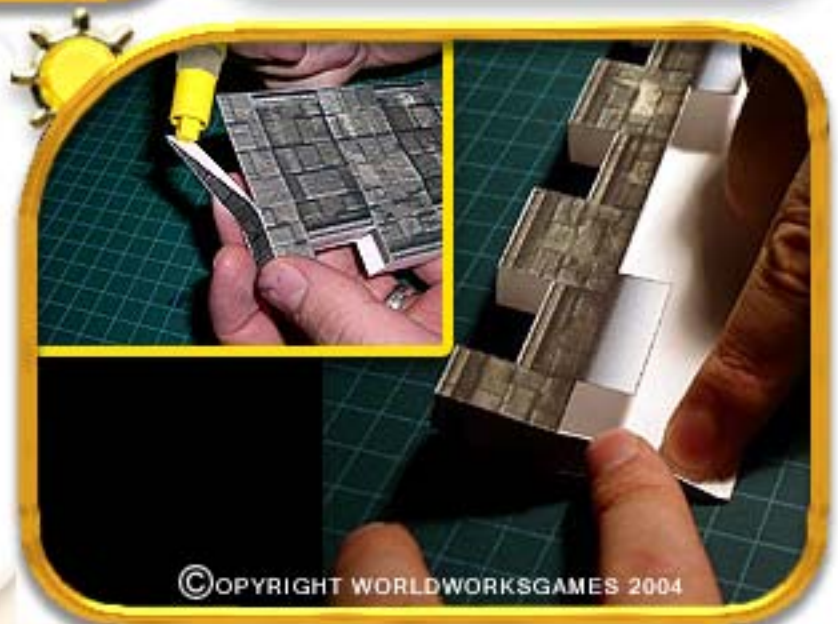


Apply a bead of glue to the first crenelation as shown. Attach the first topper square and apply pressure. Be careful to make sure the square is flush on all sides.





Continue this process with the remaining topper squares. The key here is **NOT TO PANIC**. Take your time, flipping the model over at each crenelation and applying pressure with a pen. Flip the model over again to make sure the square is flush on all sides.

Study your completed crenelations closely, looking for any gaps that might require additional pressure or gluing.

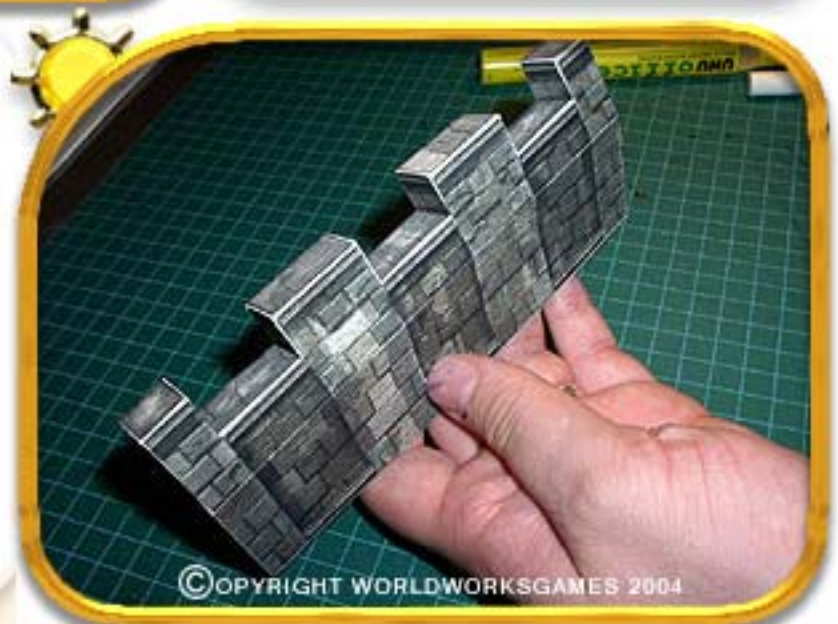

Take a few seconds and "Edge" your models with a dark felt. The end result is worth the extra minimal effort!



What is "Edging"? Please refer to the included Beginners Guide for step-by-step instruction.