


Blue Planet

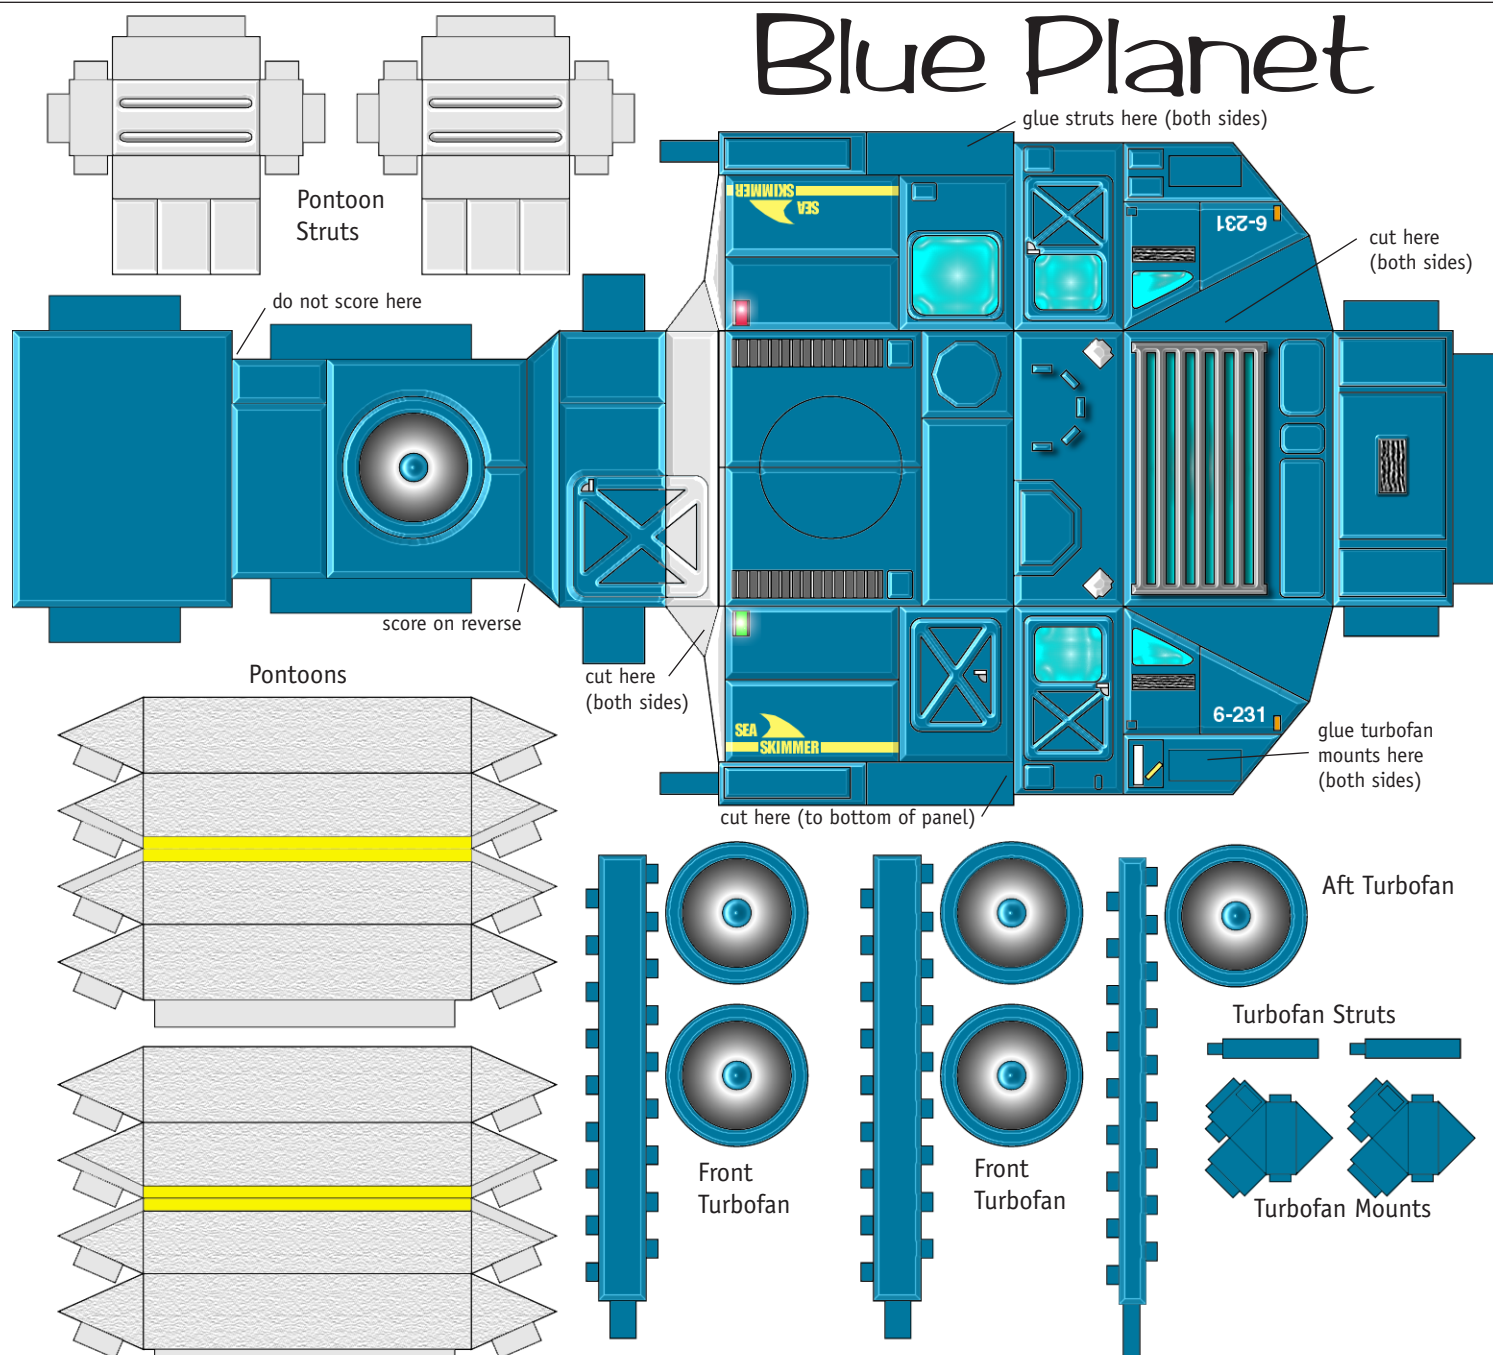

Instructions

- Pontoon Struts.** Score along black lines. Fold struts to form a block and glue using tabs.
- Pontoons.** Score along black lines. The **Pontoons** have a square cross-section. Glue large tab first. Place tabs inside each other, as if securing a box. Apply glue and squeeze shut. The **Pontoons** will be stronger if a small amount of white glue is applied to the apex of the pontoons.
- Front Turbofans.** Score tabs. To ensure ease of gluing, wrap the housing around a finger to curve it before gluing. Cement tab to form a circle; fold down tabs and apply top and bottom of turbofan. Repeat for **Aft Turbofan**, noting that it has one side only.
- Turbofan Mounts.** Score, fold and glue mounts into a wedge shape. Roll **Turbofan Struts** into a small circle, and use the tabs to secure. Glue the **Turbofan Struts** onto the side at a right angle to the one marked with a square.
- Body.** Score all seams. Note that one seam is scored on the reverse side. Fold down sides, and glue front, top, back and bottom together. Note that the seams along the aft port and starboard sections are angled.
- Glue **Pontoon Struts** to **Body**, ensuring that the darker, shadowed area is facing towards the top. Glue **Pontoons** to the **Pontoon Struts**. The yellow stripe on the **Pontoons** should face up.
- Attach **Turbofan Mounts** to **Body**. Glue **Front Turbofans** to the **Turbofan Mounts**, ensuring that the seam from the housing is adjacent to the struts to hide it as much as possible.
- Glue **Aft Turbofan** to the top of the **Body**, in the area indicated by the circle. The seam from the housing should be on the aft side.



© 2000 Paul Lesack. Permission granted to copy for personal use only
Blue Planet ©1997 Biohazard Games